



### LIST of PARTS

|   |                |   |                     |
|---|----------------|---|---------------------|
| 1 | Expansion Bolt | 5 | Screw               |
| 2 | Rubber Washer  | 6 | Hinge Base Cover    |
| 3 | Hinge Base     | 7 | Hinge               |
| 4 | Washer         | 8 | Toilet Seat & Cover |

**Please Note:** This installation manual must be followed in order for the seat to be fitted and work correctly. Please check to make sure you have all the parts (1- 8) listed below.

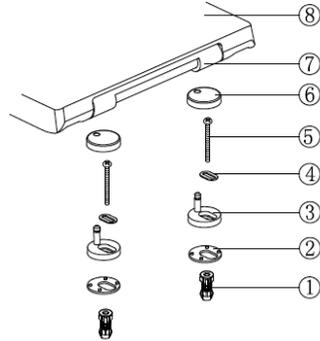


### Step 1

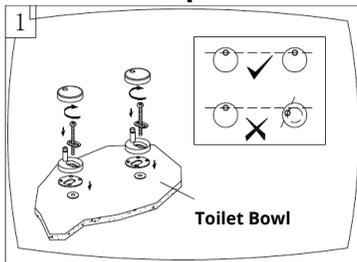

- Push the nylon Expansion Bolts (1) all the way into the holes of the toilet bowl.\*
- Place the Washer (4) into the slot of Hinge Base (3) and insert the Screw (5) into the same slot.
- Insert the Rubber Washer (2) to the bottom of the Hinge Base (3).
- Use a screwdriver to affix the Hinge Base (3) by driving the Screw (5) into the Expansion Bolt (1).
- Before tightening the screw, please adjust the Hinge Base (3) position to ensure the toilet seat is aligned with the toilet bowl by attaching the Toilet Seat & Cover (8) to the Hinge Base (3).
- Both pins of the hinge base should be at the same position horizontally as per drawing above. This is to ensure the toilet seat is installed firmly.
- Remove the toilet seat after the Hinge Base (3) positions adjusted.
- Tighten the Screw (5) all the way into the Expansion Bolt (1). This enables the expansion bolt fully expanded underneath the toilet hole to affix the Hinge Base (4) firmly.
- Place Hinge Base Cover (6) onto the Hinge Base.


\*If your toilet holes are too small, there is an alternative way to install the expansion bolts. For details, please visit the toilet seat FAQs section on [www.muzt.com.au](http://www.muzt.com.au)

### Step 2

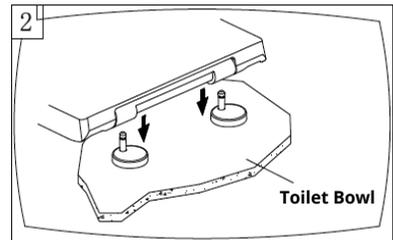

- To affix the seat, line up the toilet seat fixing holes with two Hinge Base (3) pins.
- Then push the toilet seat down. (You will hear a 'click' sound to indicate that the toilet seat is fitted correctly)

### Step 3

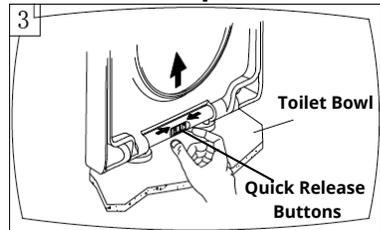

- To release the Toilet Seat & Cover (8), use two fingers to slide the quick release buttons towards each other then use the other hand to lift the seat.

- Note:**
- ◆ DO NOT use sharp or coarse materials or any corrosive products for cleaning.
  - ◆ Use soap and water only to clean the toilet seat & cover.
  - ◆ Please contact us at [customer@muzt.com.au](mailto:customer@muzt.com.au) for any installation enquiries.